

17: Maintenance service, D5244T4

XC90, 2007, D5244T4, TF-80SC AWD, L.H.D, YV1CM714671338226, 338226

16/1/2013



PRINT

17: Maintenance service, D5244T4

Service program

Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13	
		km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
		miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Automatic transmission control -check the park / neutral position (PNP) switch		x	x	x	x	x	x	x	x	x	x	x	x	x	
Parking brake -check and adjust		x	x	x	x	x	x	x	x	x	x	x	x	x	
External lighting -check the function		x	x	x	x	x	x	x	x	x	x	x	x	x	
Horn - check the signal		x	x	x	x	x	x	x	x	x	x	x	x	x	
Headlamp/fog lamp -check and align headlamps		x	x	x	x	x	x	x	x	x	x	x	x	x	
Washer / wipers for windshields and Headlamps -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x	
Seat belts -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x	
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13	
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390	
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234	
Raise the vehicle															
Engine, transmission, transmission -check for leaks	In event of leakage from the transmission, check the oil level.	x	x	x	x	x	x	x	x	x	x	x	x	x	
Engine oil, oil filter -drain the oil and replace the oil filter		x	x	x	x	x	x	x	x	x	x	x	x	x	
Automatic transmission	For vehicles used as														

The oil does not normally need changing. The oil must be changed if instructed in the text information display.	taxis or primarily used for towing, replace the oil according to the service program.													
			x		x			x			x			x
Fuel filter -drain off the condensation -replace		x		x		x		x		x		x		x
			x		x			x			x			x
Fuel filter In markets with contaminated fuel: -replace	10 000 - 20 000 km interval													
Wheels and tires (excluding spare wheel) - check for damage, wear, tire pressure		x	x	x	x	x	x	x	x	x	x	x	x	x
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Drive shafts -check the play -check rubber bellows			x		x		x		x		x		x	
Brake pads, brake discs - check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x	x	x	x
Brake and fuel lines and fuel filter -check for leakage and damage			x		x		x		x		x		x	
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Front suspension, Control system -check for signs of wear			x		x		x		x		x		x	
Rear wheel suspension -check for signs of wear			x		x		x		x		x		x	
AWD: Final drive, bevel gear -check for leaks	Only check the oil level if there is leakage.		x		x		x		x		x		x	
AWD: Propeller shaft, pilot														

bearing, universal joint -check for signs of wear			x		x		x		x		x		x	
Lower the vehicle														
Air cleaner (ACL), engine -replace	Clean the air cleaner (ACL) housing.		x		x		x		x		x		x	
Top up the engine oil		x	x	x	x	x	x	x	x	x	x	x	x	x
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Fluid levels - engine compartment -check and adjust brake fluid, clutch fluid, power steering fluid, washer fluid, coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
Engine coolant - check/adjust the anti-freeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
Battery - check: poles, electrolyte level, mounting			x		x		x		x		x		x	
Vehicles with temporary tire sealing kit - check the container with sealer fluid, replace every fourth year, see decal.														
Auxiliary unit belt, belt tensioner, idler pulley -replace according to the service program or: - replace at a maximum 10 year interval							x						x	
Timing belt belt tensioner, idler pulley -replace according to the service program							x						x	

or: - replace at a maximum 10 year interval														
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Air cleaner (ACL) passenger compartment -replace		x	x	x	x	x	x	x	x	x	x	x	x	x
Brake fluid -replace	Recommend that a customer with normal mileage has the fluid replaced every other year.		x		x		x		x		x		x	
	The fluid must be replaced every year if the car is used for mountain driving or is mainly used in humid climates.	x	x	x	x	x	x	x	x	x	x	x	x	x
SRI - set the service reminder indicator (SRI) to zero	Resetting the service reminder indicator (SRI)	x	x	x	x	x	x	x	x	x	x	x	x	x

16/1/2013

PRINT